

Channel Setting Instructions for *ResponseCard RF*

1. Press and release the "GO" button.
2. While the light is flashing red and green, enter the 2 digit channel code (the default channel is **41**).
3. After the second digit is entered, Press and release the "GO" button.
4. Press and release the "1/A" button. The light should flash yellow to confirm.